


Begin installing controls

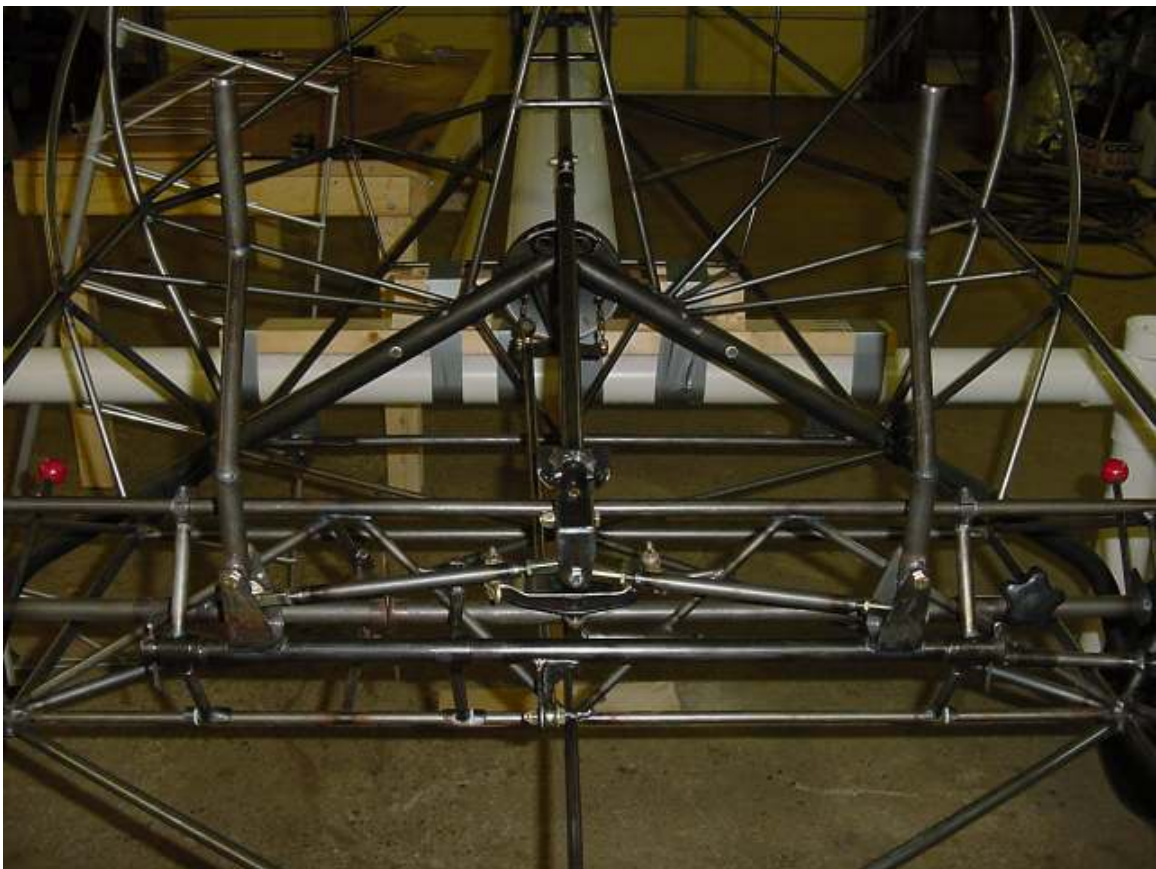

Elevator control horn spacers [cut to size on lathe]



Begin new elevator construction

